






● Bracket M

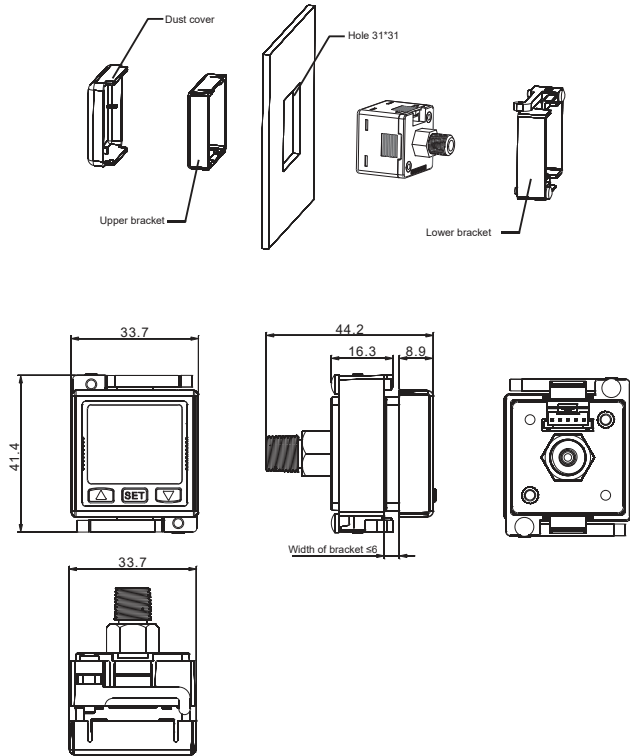

Operating Instructions (Standard Function Interface)

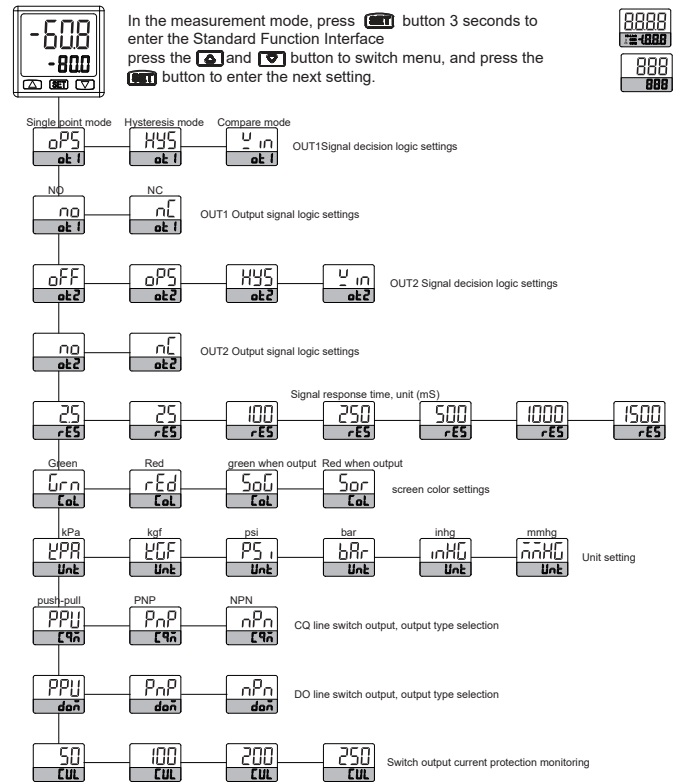


Operati...

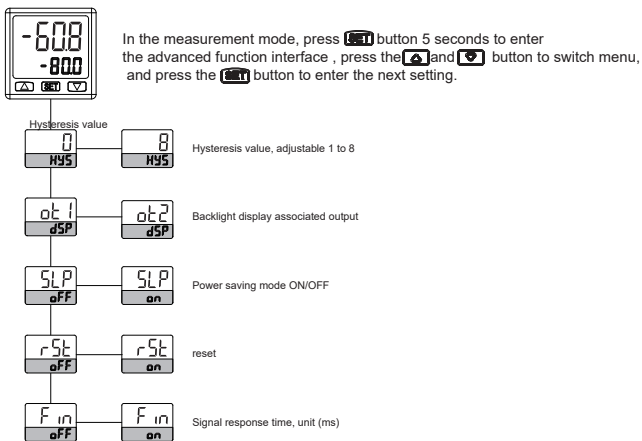

Error code description

Error code	Problem	Solutions
ER1	Output 1 short circuit/over current	Turn off the voltage, check the output circuit
ER2	Output 2 short circuit/over current	Turn off the voltage, check the output circuit
ER3	The zero return operation is out of range	Check the external pressure
HHH/LLL	Pressure overrange	Please use within the allowable pressure range
ER6~9	system error	Power off and restart, if it does not recover, please send it back

Output function diagram in NO state

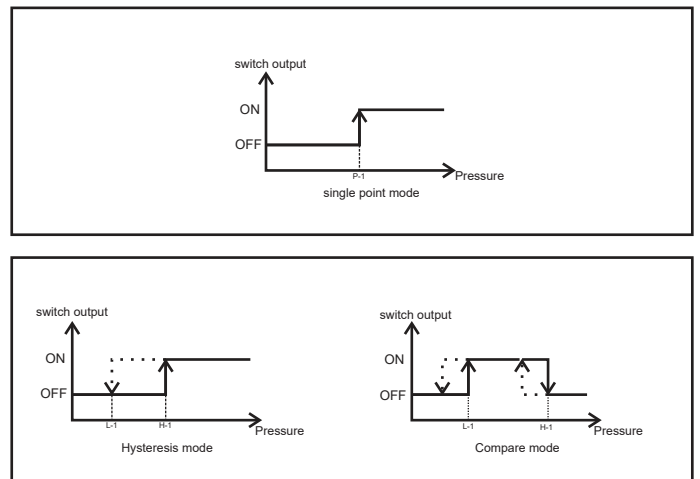

**!** Cautions

1. This product is only suitable for gas pressure measurement, the medium should not contain corrosive or flammable gas
2. The use environment of this product should avoid high temperature and high humidity
3. When installing or disassembling this product, please ensure that the pressure source is stopped, and the output line is disconnected from the controller to ensure the safety of the product and life.
4. When installing, please use components that meet the size of the pressure interface to connect, and confirm that the seal is good, so as to avoid measurement errors or gas leakage and other problems.
5. Please confirm that the wiring is correct before powering on, such as excessive voltage input to avoid product damage